

Line-Check – Why Can't I Hear Anything?

<https://www.grzaudio.com/downloads-en/>

If you don't see a level in the channel, the reason might be as follows:

- A classic: Perhaps the mic requires phantom power? Please mute the channel!
- The mic's On/Off button is turned off.
- Your mic is not plugged into the cable.
- You may need to raise the gain.
- Your routing is incorrect.
- Check if your digital stage box is configured correctly.
- Your channel is perhaps assigned to a different SOURCE
- Your cable is broken.
- Your mic is broken.
- The input of the mixer is defective.

If you can see a level on the meter, meaning that the signal connects with the mixer, but you cannot hear anything on the PA system, you can check your 8 Mini-Meters on the iPad to trace where the signal is arriving. Check if the following points apply:

- Your Channel Fader is pulled down.
- Your Master Fader is pulled down or Master Mute is active.
- Mute group or Mute in the channel is active.
- You have a Gate activated in the channel and the knocking is too soft to open the gate.
- The Fader of the main groups (vocals or instruments) is not raised (Unity-gain=0 dB).
- Your channel is not routed to the main groups.
- The main groups are not routed to the Main-LR Bus.
- The DCA Fader is pulled down.